
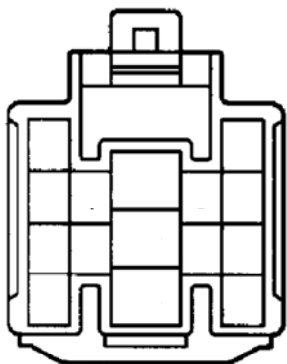
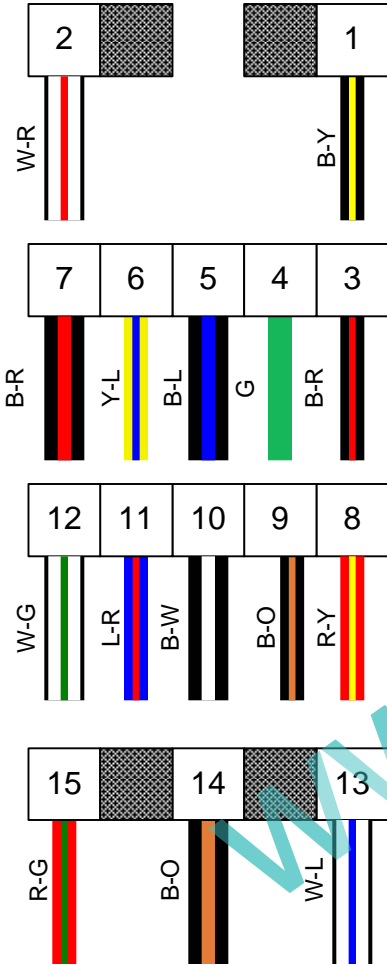





## JZA70 Body Side Connector Map 90-92

### JZA70 Male (IH1)

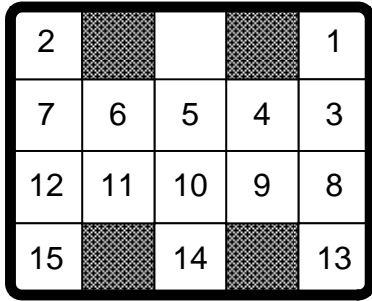

IH1 Pin		B1 Pin
1	Heater water valve	1
2	PPS comp pin#2 to solenoid +	B3-4
3	FP Rel & Resistor to check conn.	3
4	COR pin #4 from ECU conn X pin14	4
5	COR pin 3 JB4 A/T Only	5
6	FP Relay pin #1	6
7	COR pin #2 JB4	7
8	CC SW M/T	8
9	IGN Fusible Link to IGSW on ECU	9
10	Starter relay JB4 #4 COR JB4 #3 NSW for A/T	10
11	From A/C Amplifier Pin 11 Conn LI-7 to ECU A/C	11
12	PPS comp pin#5 to solenoid -	B3-10
13	A/C AMP L1 pin #8	13
14	IG SW IG2	14
15	CC ECU (A/T) + ECT ECU	15

### MA71 Male (B1)

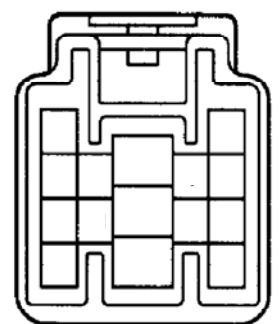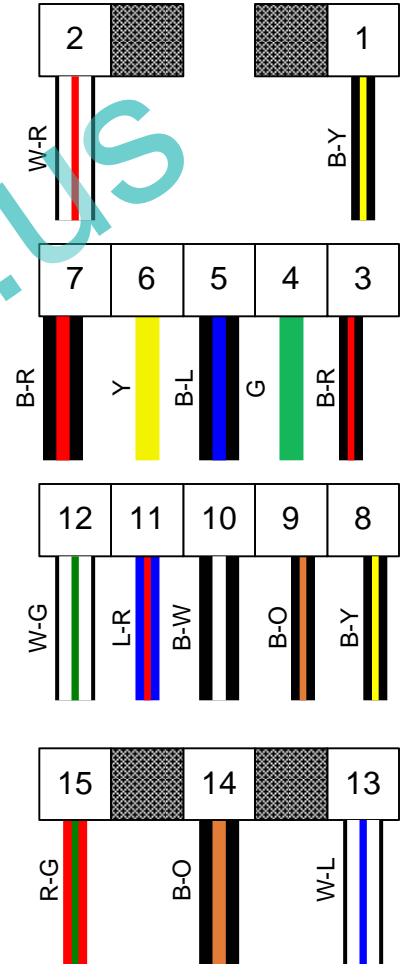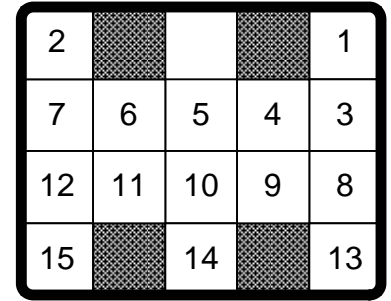

**B3** GRAY

